



Apach


CHEF *live*


LGST39


1

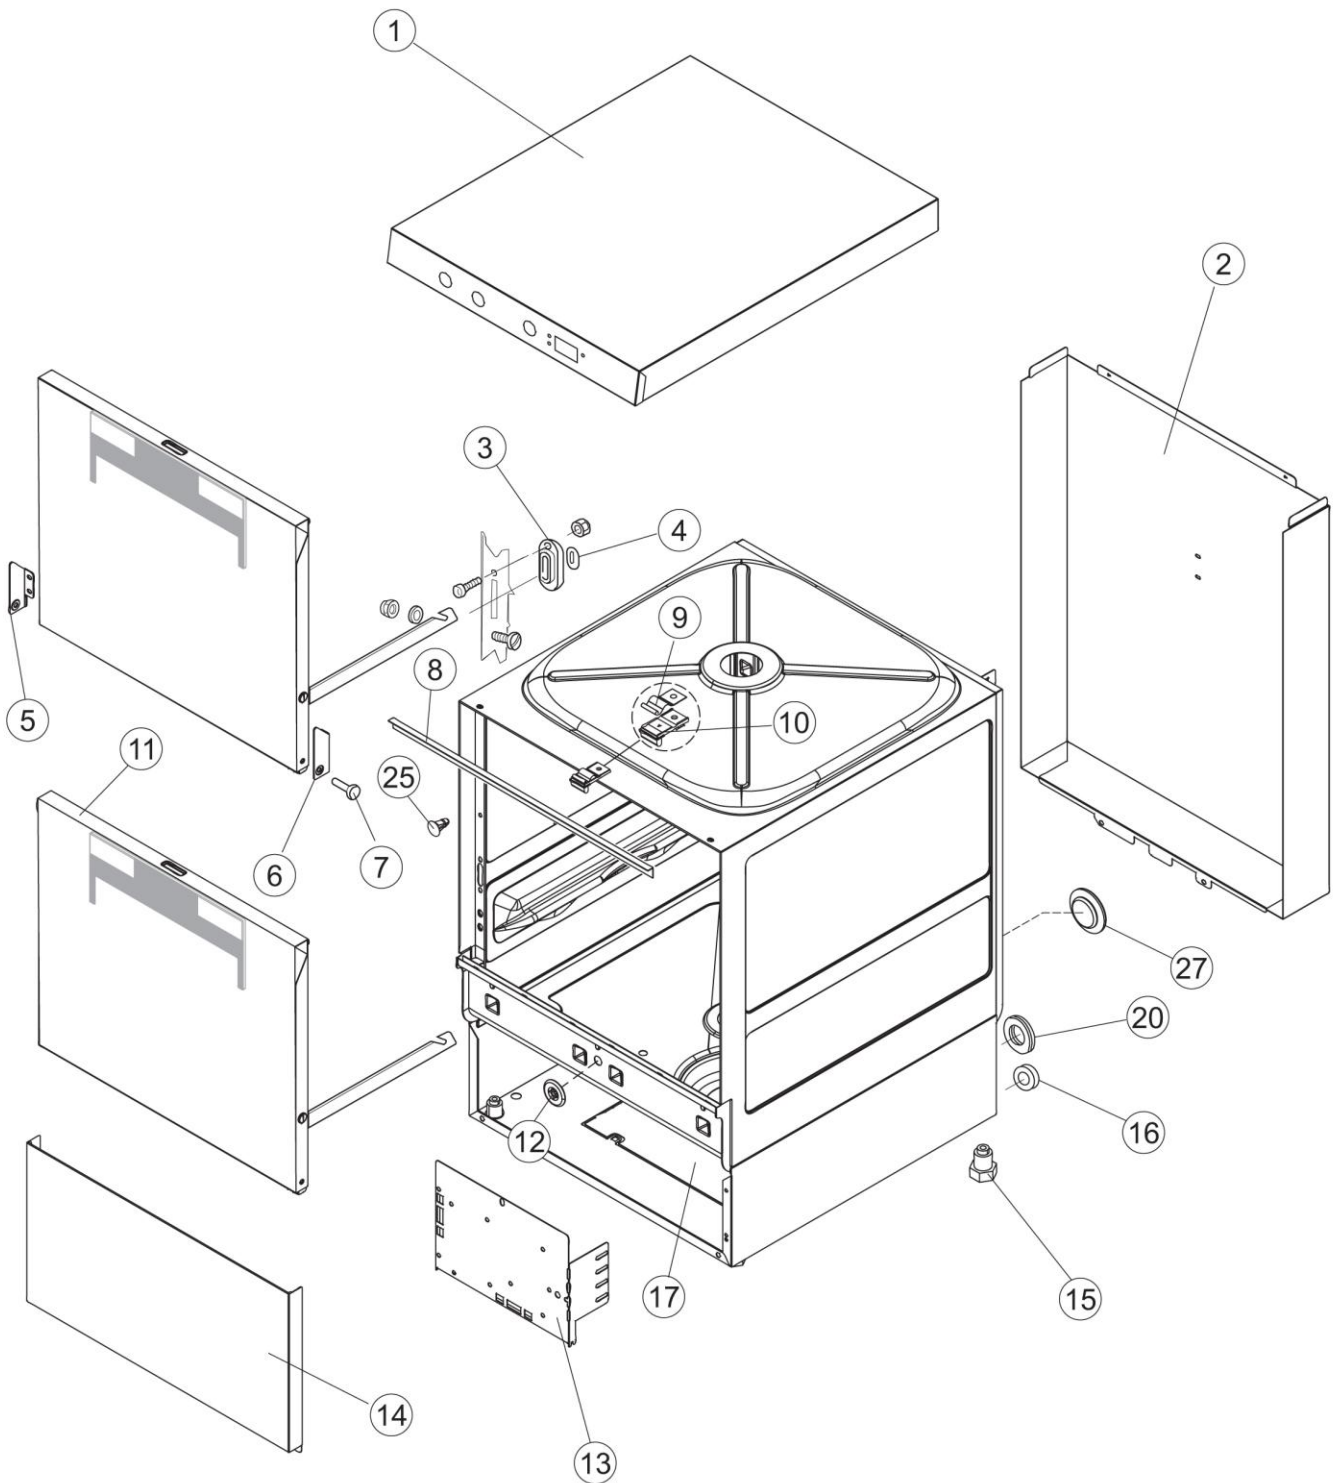

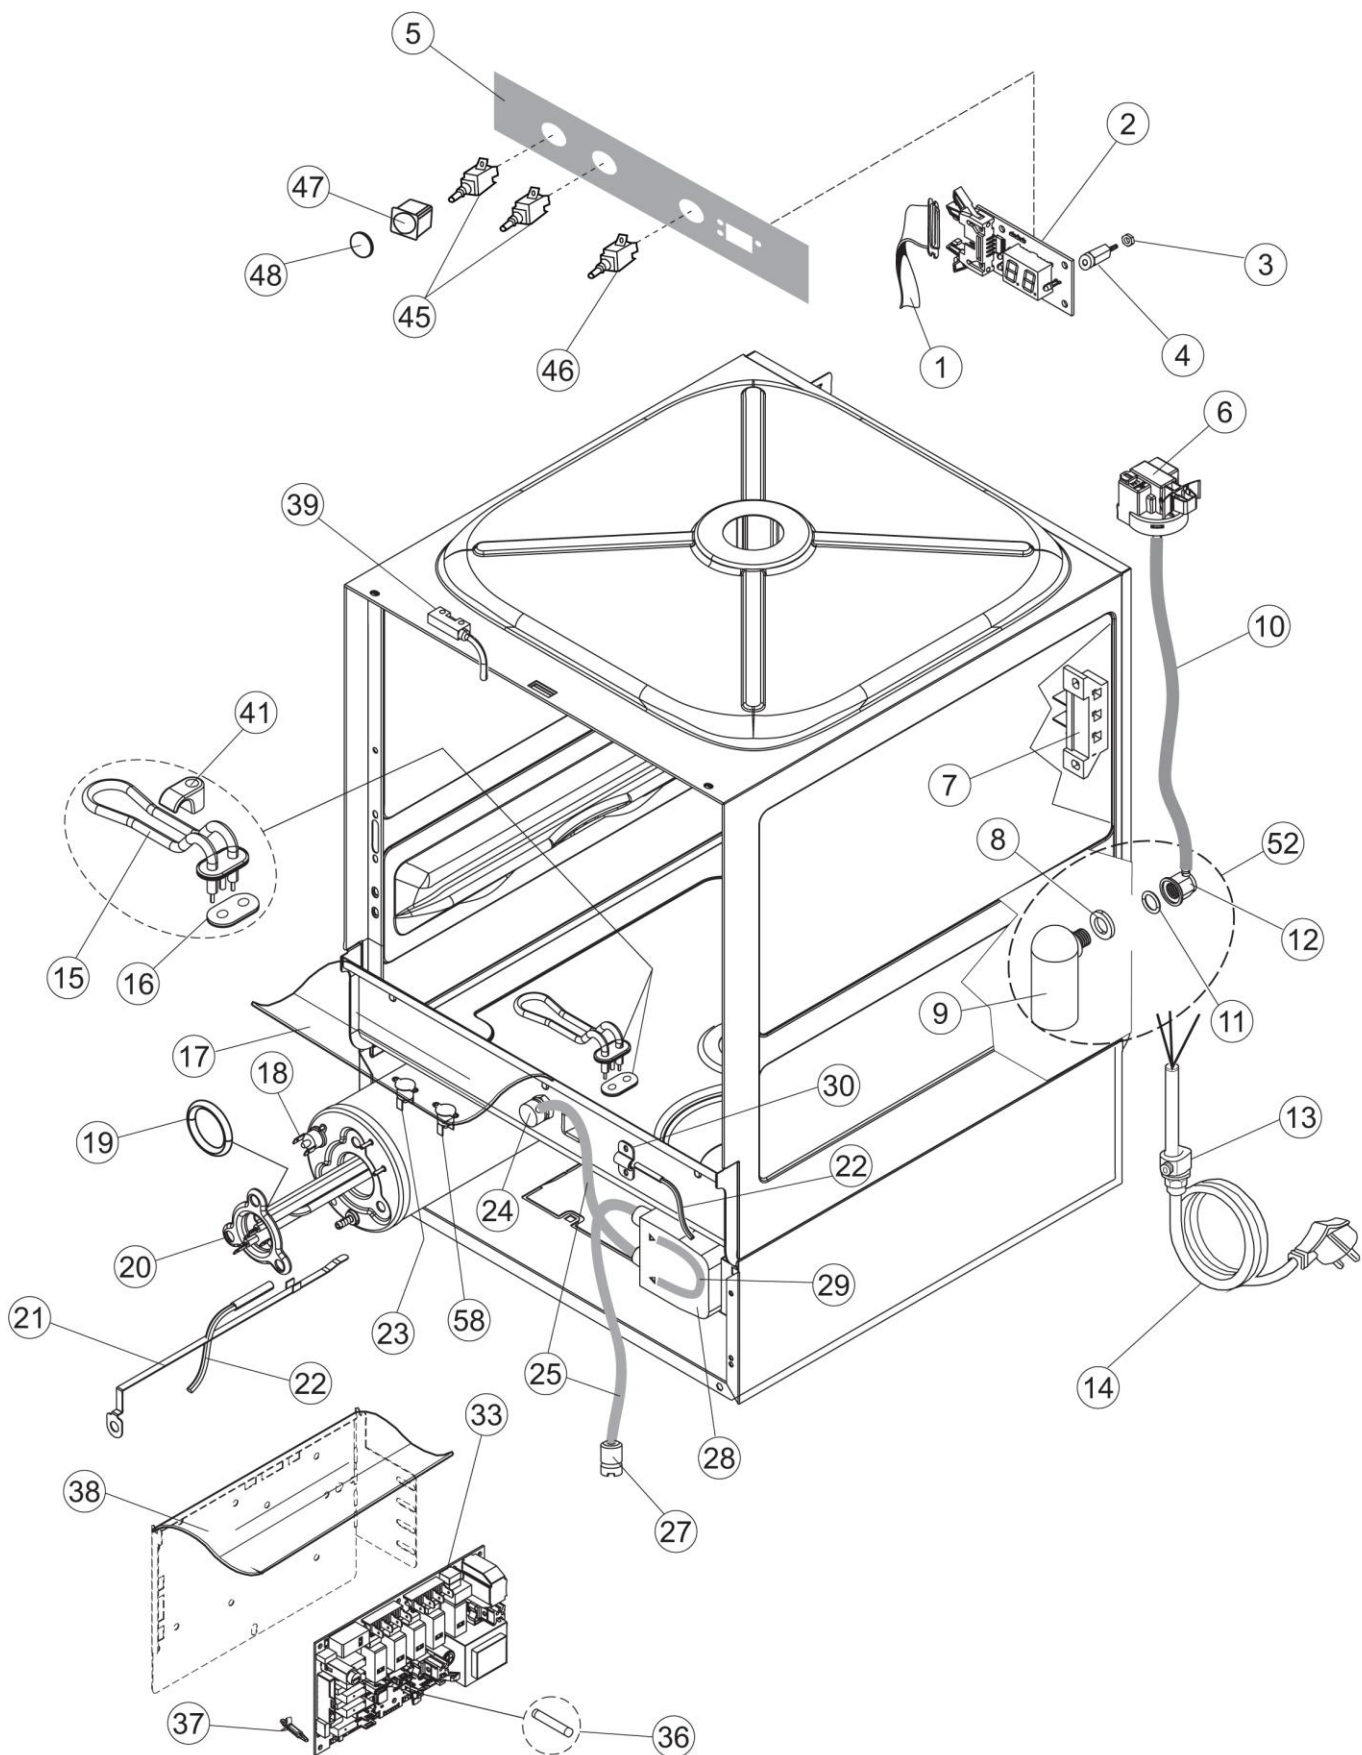

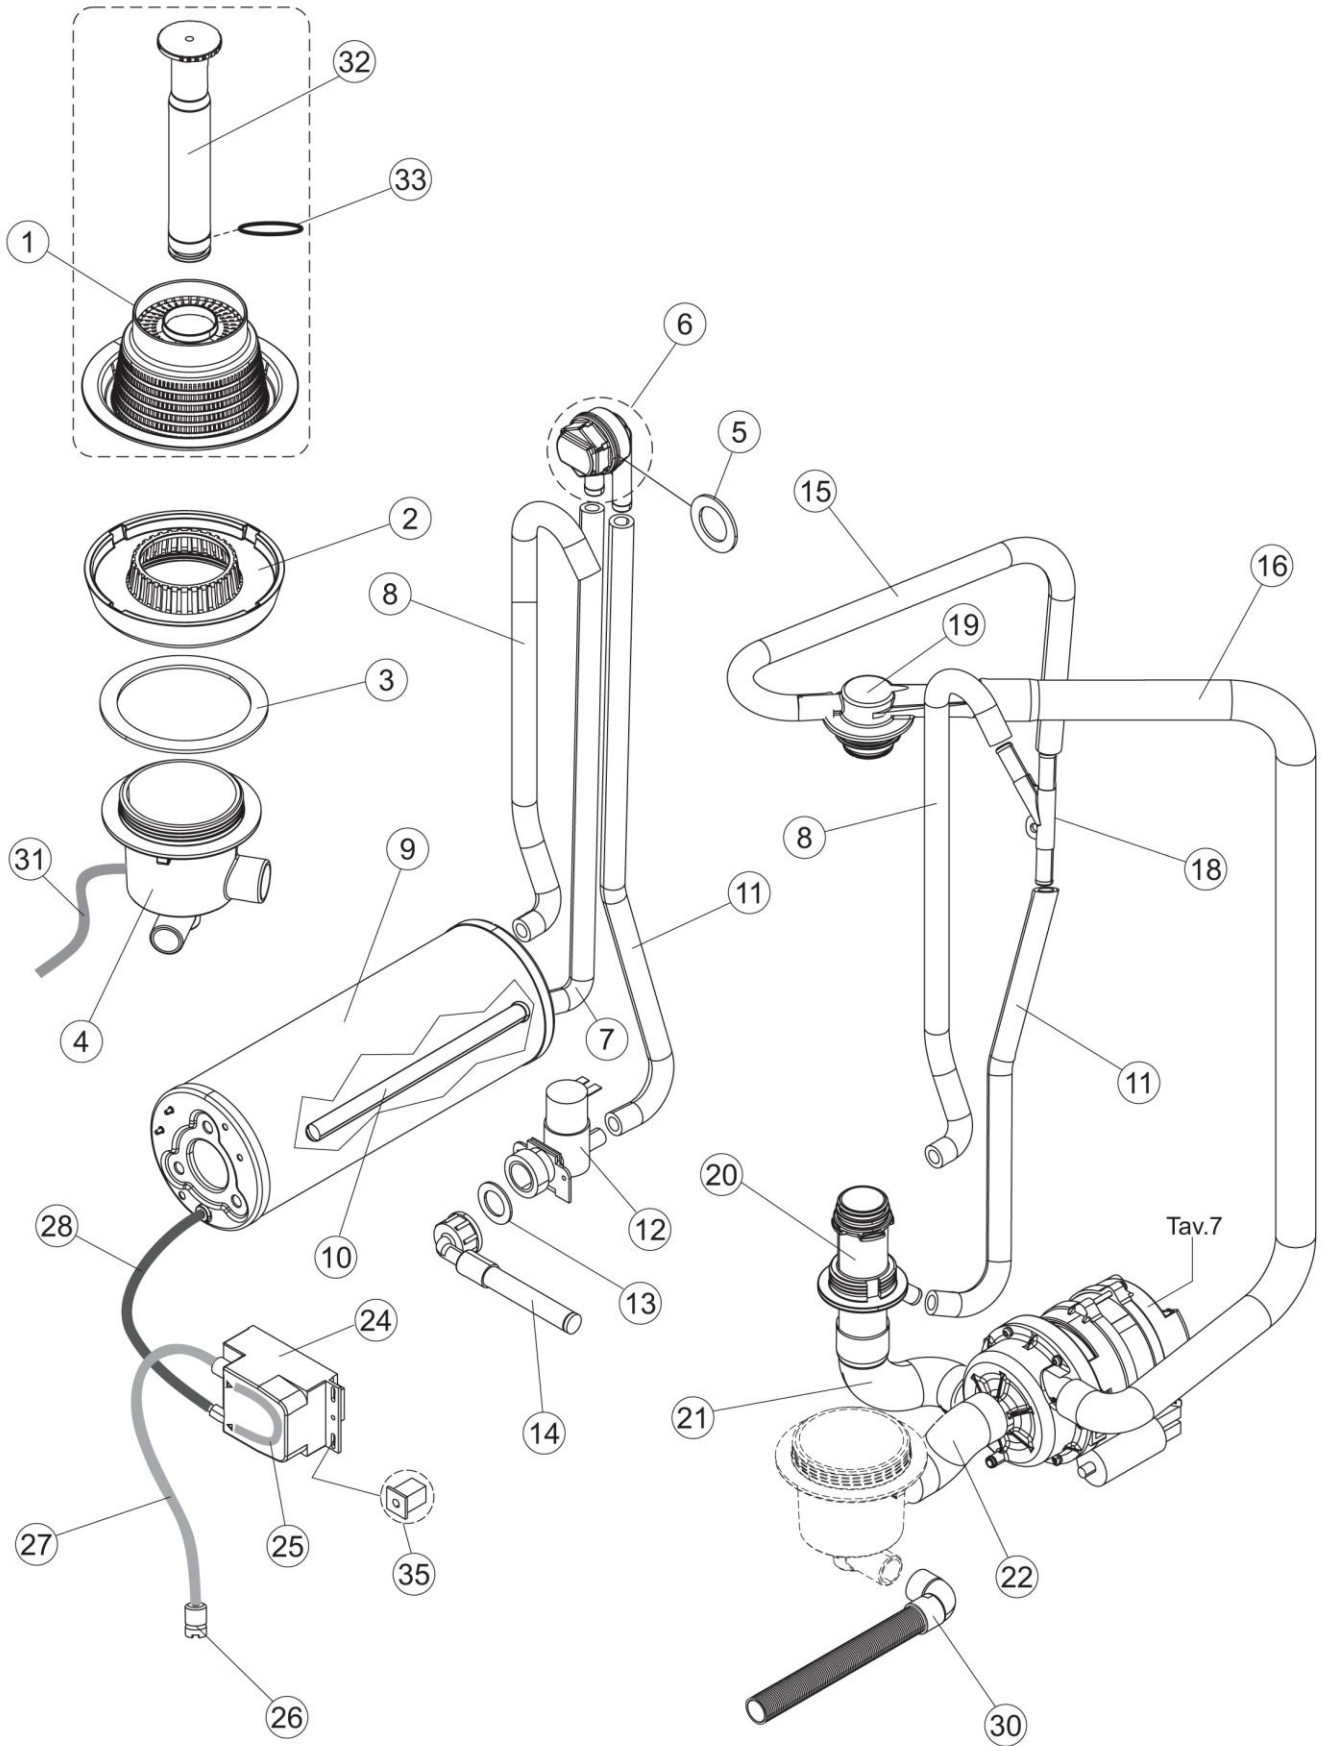


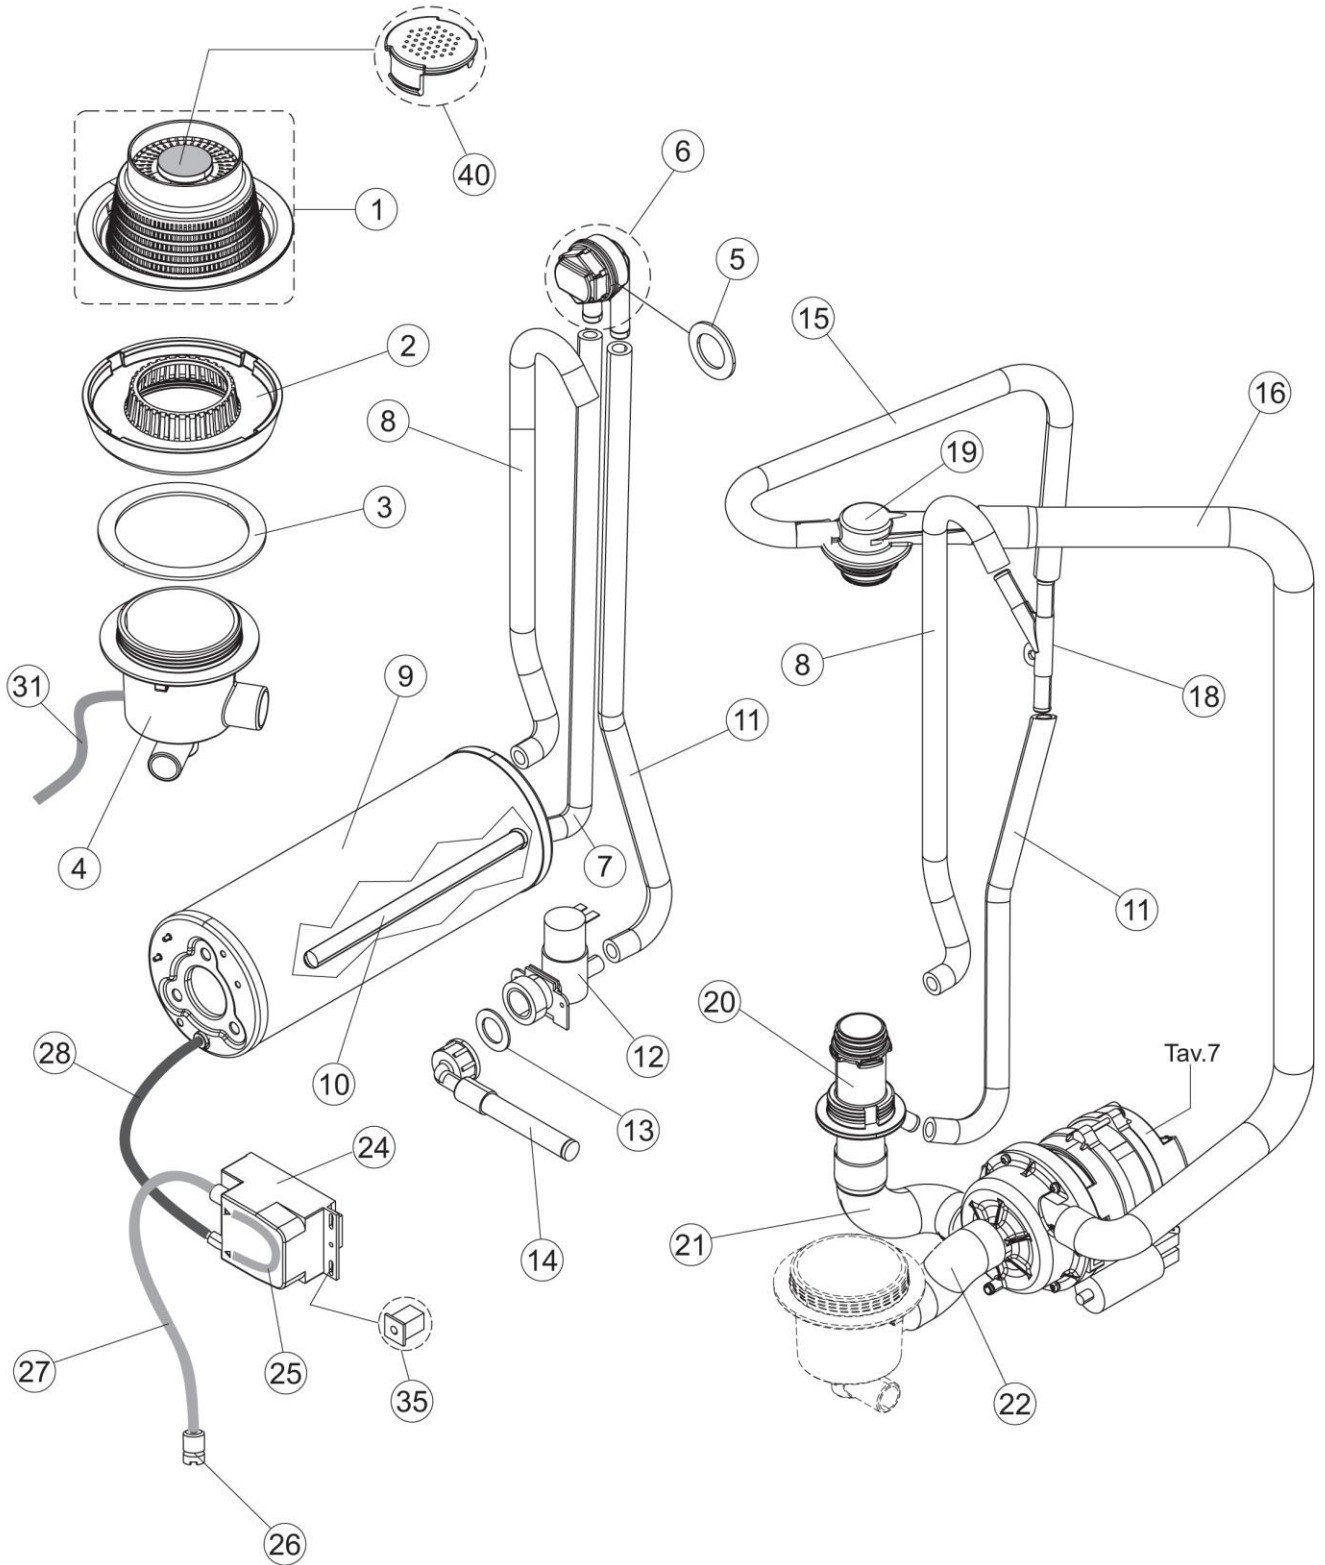

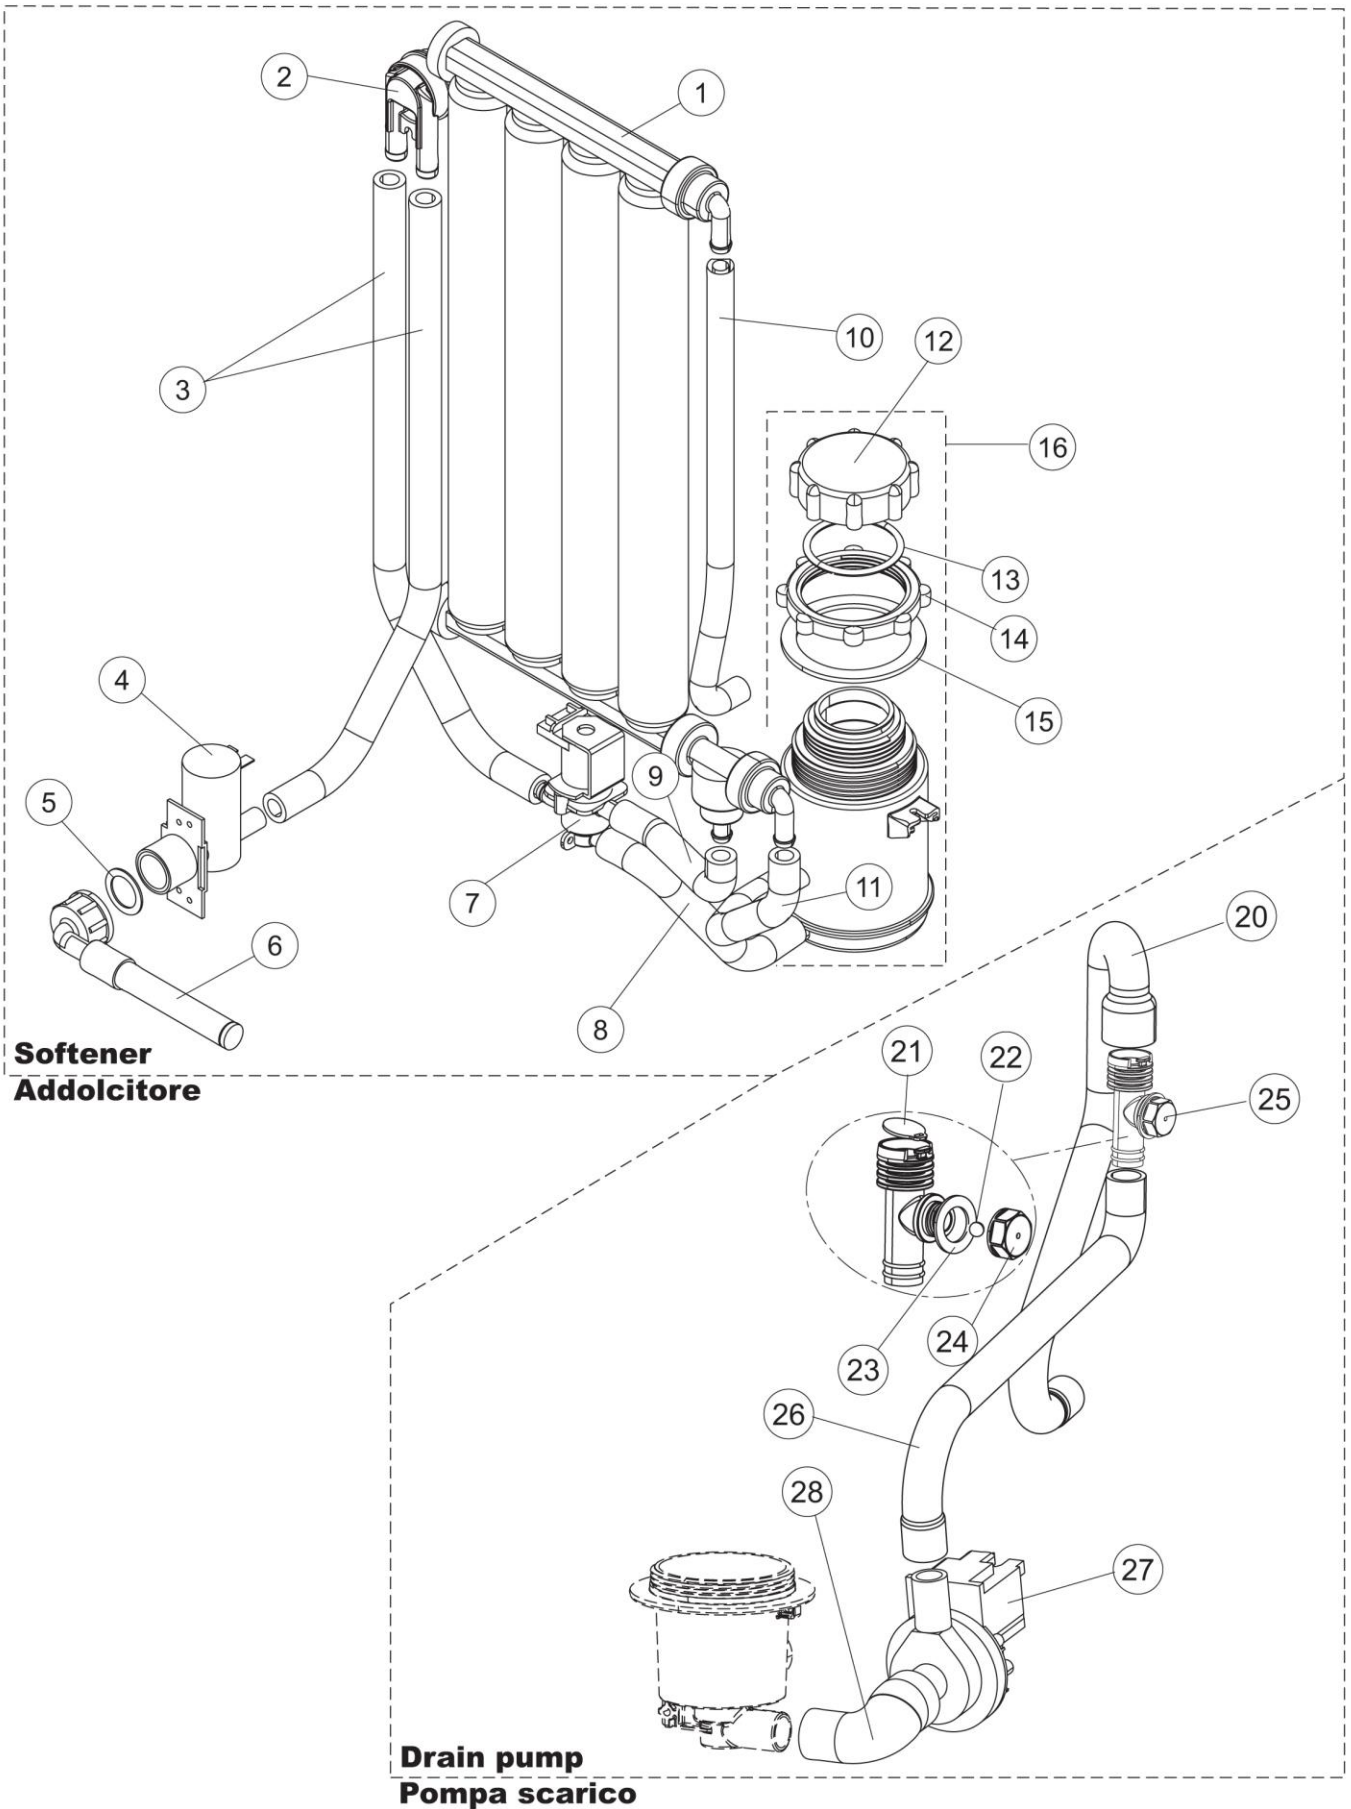

**Softener
Addolcitore**

**Drain pump
Pompa scarico**

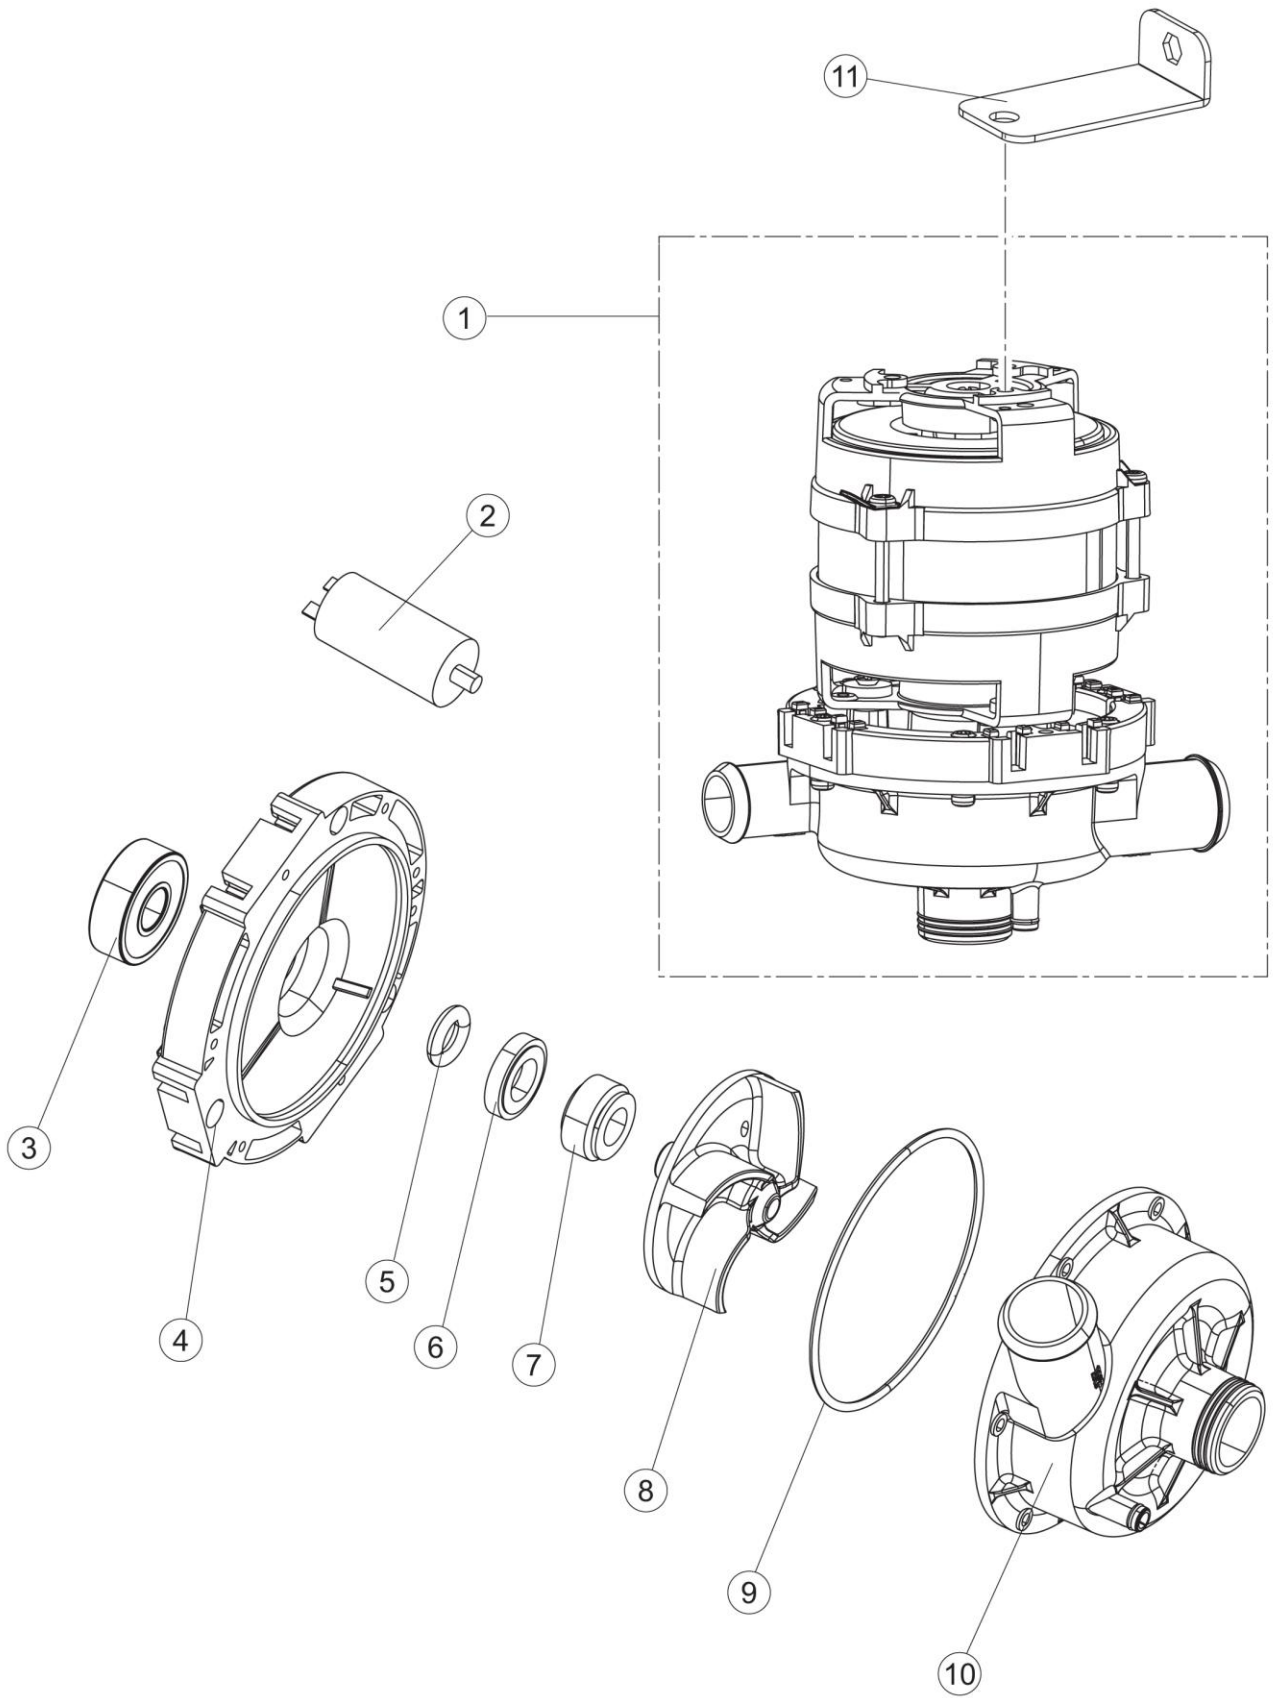

(*) Recommended spare part.

Page	Spare part position	Spare part code no.	Old code number	Description	U.m.
1	1	004323		COVER	NR
1	2	022165		BACK PANNEL LA400	NR
1	3	307005	REB307005	ROD OF TOP DOOR-STOP BAR	NR
1	4	028078	REB028078	DOOR SHOULDER PLATE FOR GLASSWASHER	NR
1	5	311009	REB311009	RIGHT DOOR HINGE FOR GLASSWASHERS	NR
1	6	311008	REB311008	RIGHT DOOR HINGE FOR GLASSWASHERS	NR
1	7	325034	REB325034	PIVOT	NR
1	8	437058	REB437058	DOOR GASKET FOR GLASSWASHER	NR
1	9	449036	REB449036	DOOR LOCK SPRING FOR GLASSWASHERS	NR
1	10	329012	REB329012	DOOR LOCK FOR GLASSWASHERS	NR
1	11	029807		COMPLETE DOOR LA400 CD	NR
1	12	480153		PLUG	NR
1	13	035126		NOT IN PRICE-LIST	
1	14	012350		FRONT PANEL LA400	NR
1	15	461031		HEXAGONAL FOOT FOR GLASSWASHER	NR
1	16	459006	REB459006	CHOCK D INT 9 EST 16	NR
1	17	030202		NOT IN PRICE-LIST	
1	20	459022		CABLEHOSE	NR
1	25	480164		NOT IN PRICE-LIST	
1	27	480084		PLUG	NR
2	1	211017		FLAT CABLE	NR
2	2	74902		CONTROL KEYBOARD	NR
2	3	417119		NUT	NR
2	4	419036		INTERFACE BOARD DISTANCE KEEPERS	NR
2	5	026837		CONTROL ADHESIVE INTERFACE STEELTECH 34-00	NR
2	6	224031		PRESSURE SWITCH	NR
2	7	220010	REB220010	TERMINAL BLOCK	NR
2	8	437019	REB437019	PACKING FOR AIR TRAP OF PRESSURE SWITCH	NR
2	9	107017		AIR TRAP for pressure switch	NR
2	10	143235		PIPE	MT
2	11	456020	REB456020	O-ring	NR
2	12	468029	REB468029	AIR TRAP CONNECTION OF PRESSURE SWITCH	NR

(*) Recommended spare part.

Page	Spare part position	Spare part code no.	Old code number	Description	U.m.
2	13	459005	REB459005	CABLE-RETAINER	NR
2	14	299040	REB299040	PLUG SCHUCKO 90°- CABLE 1=2,5 MT	NR
2	15	230124		HEATING ELEMENT	NR
2	16	437086	REB437086	PACKING OF THE TANK RESISTANCE	NR
2	17	214117		NOT IN PRICE-LIST	
2	18	236047	REB236047	SAFETY TANK THERMOSTAT 95°C	NR
2	19	456075		O-RING	NR
2	20	230113		HEATING ELEMENT	NR
2	21	69871		PROBE HOLDER	NR
2	22	231016		TEMPERATURE PROBE	NR
2	23	236061		THERMOSTAT 127°	NR
2	24	999348		DETERGENT TANK FITTING	NR
2	25	143194	REB143194	PIPE	MT
2	27	121993		filter aid dispenser	NR
2	28	209043		DETERGENT DOSING PUMP	NR
2	29	143258		"SANTOPRENE" PIPE	NR
2	30	028105		FIXING PLATE	NR
2	33	215042-6		MAIN BOARD GET50.2 G MD	NR
2	36	228010		FUSE	NR
2	37	461028		foot board support	NR
2	38	214077		TRANSP. SAFETY PLATE 44	NR
2	39	80871		MAGNETIC DOOR SWITCH	NR
2	41	999351		GROUP STOPPED TANK HEATER	NR
2	45	208010	REB208010	DOUBLE SWITCH	NR
2	46	226071	REB226071	CYCLE PUSH-BUTTON - 2 CONTACTS	NR
2	47	226126		push button case	NR
2	48	227081		BUTTON	NR
2	52	984009		PRESSURE SWITCH AIR BELL	NR
2	58	236052		THERMOSTAT 90°+/-3°C	NR
3	1	121158		STAINER	NR
3	2	429077		RING NUT	NR
3	3	437107		GASKET	NR

(*) Recommended spare part.

Page	Spare part position	Spare part code no.	Old code number	Description	U.m.
3	4	136031		ASPIRATION AND DRAIN BODY	NR
3	5	437080		GASKET	NR
3	6	144030		NO RETURN VALVE	NR
3	7	127177		INLET BOILER PIPE LA400	NR
3	8	127178		BOILER PIPE LA400	NR
3	9	104056		BOILER	NR
3	10	143228		PIPE	NR
3	11	143004	REB143004	PIPE	MT
3	12	240011	REB240011	FILL VALVE	NR
3	13	437041	REB437041	GASKET	NR
3	14	143270		INLET WRAS PIPE	NR
3	15	127124		SLEEVE	NR
3	16	127175		DELIVERY WASH HOSE	NR
3	18	143268		JuNCTION "Y"	NR
3	19	115153		support arms wash / rinse	NR
3	20	115152		MAIN MANIFOLD	NR
3	21	127176		DELIVERY WASH HOSE LA400	NR
3	22	127105		suction pipe	NR
3	24	209042		DOSING PUMP	NR
3	25	143261		HOSE	NR
3	26	121993		filter aid dispenser	NR
3	27	H.775601		PIPE	MT
3	28	143005	SPG10	LINEN RUBBER PIPE 5X12 - BLACK	MT
3	30	127184		SLEEVE	NR
3	31	H.165168		PIPE	MT
3	32	142060		TROPPO PIENO LA400	NR
3	33	456080		O-ring	NR
3	35	431007		CLIPS	NR
4	1	121162		STAINER	NR
4	2	429077		RING NUT	NR
4	3	437107		GASKET	NR
4	4	136031		ASPIRATION AND DRAIN BODY	NR

(*) Recommended spare part.

Page	Spare part position	Spare part code no.	Old code number	Description	U.m.
4	5	437080		GASKET	NR
4	6	144030		NO RETURN VALVE	NR
4	7	127177		INLET BOILER PIPE LA400	NR
4	8	127178		BOILER PIPE LA400	NR
4	9	104056		BOILER	NR
4	10	143228		PIPE	NR
4	11	143004	REB143004	PIPE	MT
4	12	240011	REB240011	FILL VALVE	NR
4	13	437041	REB437041	GASKET	NR
4	14	143270		INLET WRAS PIPE	NR
4	15	127124		SLEEVE	NR
4	16	127175		DELIVERY WASH HOSE	NR
4	18	143268		JuNCTION "Y"	NR
4	19	115153		support arms wash / rinse	NR
4	20	115152		MAIN MANIFOLD	NR
4	21	127176		DELIVERY WASH HOSE LA400	NR
4	22	127105		suction pipe	NR
4	24	209042		DOSING PUMP	NR
4	25	143261		HOSE	NR
4	26	121993		filter aid dispenser	NR
4	27	H.775601		PIPE	MT
4	28	143005	SPG10	LINEN RUBBER PIPE 5X12 - BLACK	MT
4	31	H.165168		PIPE	MT
4	35	431007		CLIPS	NR
4	40	480161		PLUG	NR
5	1	117009		WATER SOFTNER	NR
5	2	144030		NO RETURN VALVE	NR
5	3	143004	REB143004	PIPE	MT
5	4	240016	DEV3S16	SOLENOID VALVE	NR
5	5	437041	REB437041	GASKET	NR
5	6	143270		INLET WRAS PIPE	NR
5	7	999288		SOLENOID VALVE	NR

(*) Recommended spare part.

Page	Spare part position	Spare part code no.	Old code number	Description	U.m.
5	8	127193		NOT IN PRICE-LIST	
5	9	127190		NOT IN PRICE-LIST	
5	10	127191		NOT IN PRICE-LIST	
5	11	127194		DELIVERY HOSE	NR
5	12	480005	REB480005	SALT CONTAINER SCREW CAP	NR
5	13	456052	REB456052	O-ring	NR
5	14	429011	REB429011	RING NUT	NR
5	15	437034	REB437034	GASKET	NR
5	16	406998	REB406998	SALT CONTAINER UNIT	NR
5	20	127183		SLEEVE	NR
5	21	499092		diaphragm valve vent	NR
5	22	476008		SPHERE	NR
5	23	437083		GASKET	NR
5	24	468199		PIPE FITTING	NR
5	25	144992		NO RETURN VALVE	NR
5	26	127185		NOT IN PRICE-LIST	
5	27	130204		DRAIN PUMP 90°50HZ(LA350-400)	NR
5	28	127174		NOT IN PRICE-LIST	
6	1	437113		GASKET	NR
6	2	303018	REB303018	SEALING AND SLIDING RING CL.3	NR
6	3	325113		PIVOT	NR
6	7	308039		PLASTIC ARM BUSH	NR
6	8	454007		PIN	NR
6	10	990140		RINSE AND WASH ARM	NR
6	11	990139		RINSE AND WASH ARM	NR
6	13	429079		RING NUT	NR
6	14	437108		GASKET	NR
6	24	121156		STAINER	NR
6	25	121157		STAINER	NR
6	26	121166		STAINER	NR
7	1	130202		WASHPUMP LA400 230/50-1N	NR
7	2	206014		CAPACITOR 5mF	NR

(*) Recommended spare part.

Page	Spare part position	Spare part code no.	Old code number	Description	U.m.
7	3	314011		WASH-PUMP BEARING	NR
7	4	315028		FLANGE	NR
7	5	456084		O-ring	NR
7	6	141012		WASHPUMP SHAFT SEAL	NR
7	7	141013		WASHPUMP SHAFT SEAL	NR
7	8	124063		ELECTROPUMP IMPELLER	NR
7	9	456083		O-ring	NR
7	10	116035		ELECTROPUMP HOUSING	NR
7	11	035132		NOT IN PRICE-LIST	